

Use Extron Switch inside of lectern to select projected sources until this room's touch panel is programmed.

- **Step 1:** Turn on Video Projector using the Canon Remote Control.
- **Step 2:** Turn on presentation device to be used (DVD, VCR, PC, or Document Camera).
- **Step 3:** Select Source on **Extron Switch** located in lectern.

Source Button **4**: DVD or VCR

Source Button **6**: Computer

Source Button **8**: Document Camera

